

2-3-1
MIRIONE

425 ALNESS STREET, DOWNSVIEW, ONTARIO, CANADA M3J 2H4
TELEPHONE (416) 667-1211, SALES AND SERVICE 667-1240
TELEX: D6-217501

AS-005C

For your protection read these instruction to obtain maximum benefit from this alarm system.

MIRIONE

70021091

CODE SELECTION

The three digit code consists of any combination of the numbers 1, 2 and 3, resulting in 27 different combinations. The units are normally supplied with the code 2-3-1.

TO CHANGE THE CODE:

1. Remove the two panel screws, pull the unit out from the wall. DO not remove the wires.
2. Choose a code, which can be any combination of the digits 1, 2 and 3, and enter here for reference.



3. To set the first digit, arrange the two brown jumpers into pattern "1", "2", or "3" as required.
4. To set the second digit arrange the red jumpers into pattern "1", "2" or "3" as required.
5. To set the third digit arrange the orange jumpers into pattern "1", "2" or "3" as required.
6. Replace unit into housing, fasten with mounting screws.


OPERATING INSTRUCTIONS

INTRUSION - "OUT-MODE"
LEAVING

1. Ensure the "READY" light is ON. If not, close the door and any other protected opening.
2. ARM the panel by entering the three digit code. The "ON" light will start flashing, indicating the panel is ARMED.
3. Leave the premises within 20 seconds. If you wait too long (more than 20 sec.) the soft buzzer will sound when the door is opened. Immediately DISARM the panel by entering the three digit code again and then REARM. This will give another 20 sec. period to leave the premises without triggering a false alarm.

ENTERING

1. When entering the protected premises, the soft "Entry-Warning" buzzer will sound. DISARM the panel by entering the three digit code. The "ON" light will extinguish.
2. If the panel is not DISARMED within 15 sec. the intrusion alarm signal will sound. Should this occur, simply DISARM the panel.

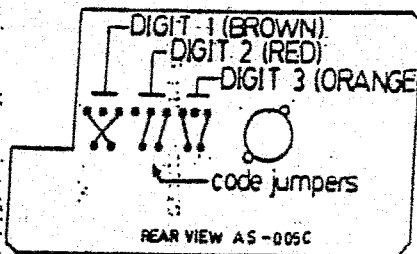

INTRUSION - "IN-MODE"

1. Arm the panel as described above.
2. Press and hold pushbutton 2 until the "ON" light stops flashing.
3. The panel is armed in the "IN-MODE" and opening the door or other protected opening will sound the intrusion alarm immediately.
4. The panel is DISARMED by entering the 3-digit code.

FIRE/EMERGENCY

1. The FIRE/EMERGENCY alarm will sound whether the panel is armed or disarmed.
2. To silence the alarm, enter the correct code. If the panel was in the "disarmed" mode, enter the code twice to return the panel to the disarmed state.
3. An EMERGENCY alarm may be entered at the panel by simultaneously pressing buttons 1 and 3.

ALARM SIGNALS

ENTRY-WARNING - Soft-interrupted buzzer
INTRUSION - Loud-interrupted tone
FIRE/EMERG. - Loud steady tone.

- see reverse for code selection -